


TOSHIBA

STEREO AMPLIFIER

SB-420

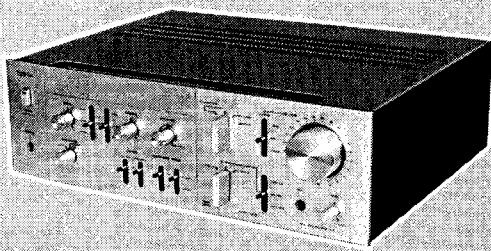

SPECIFICATIONS

■ Main-Amplifier

Continuous Output:	20 Hz ~ 20 kHz (8Ω) 42W + 42W
(Both Channel Driven)	(4Ω) 50W + 50W
1 kHz	(8Ω) 45W + 45W
	(4Ω) 55W + 55W
Distortion Factor:	Full Higher Harmonic Distortion
	0.3% (at rated output)
	0.05% (at 1W output)
	Cross Modulation Distortion
	0.3% (at rated output)
	0.05% (at 1W output)
Frequency Characteristic:	10 Hz ~ 80 kHz +0 dB
	-1 dB
Output Band Width:	5 ~ 40 kHz 8Ω IHF 0.3% Both
	Channel Driven
Impedance:	1 V (50 kΩ)
Residual Noise:	Max. 1 mV (8Ω)
Damping Factor:	Min. 25
Speaker Impedance:	4Ω ~ 16Ω (8Ω ~ 16Ω for A + B only)

■ Pre-Amplifier

Impedance:	PHONO 1	2.5 mV	(50 kΩ)
	PHONO 2	2.5 mV	(50 kΩ)
	TUNER	150 mV	(50 kΩ)
	AUX	150 mV	(50 kΩ)
Recording Output:	TAPE REC.	150 mV	
	DIN	30 mV	
Rated Output:	PRE OUT	1 V	
Frequency Characteristic:	10 Hz ~ 50 kHz	+0 dB	(AUX)
		-1 dB	
Full Higher Harmonic Distortion Factor:	0.05%		

Tone Control:

BASS (100 Hz) ±10 dB, ±7 dB
(Turnover frequency: 400 Hz, 200 Hz)
TREBLE (10 kHz) ±10 dB, ±7 dB
(Turnover frequency: 2.5 kHz, 5 kHz)

Filter:

LOW 20 Hz (6 dB/oct.)
HIGH 8 kHz (6 dB/oct.)

Muting:

-10 dB, -20 dB

Loudness Control:

8.5 dB (100 Hz) 3.5 dB (10 kHz)

Equalizer Deviation:

(30 ~ 15 kHz) ±0.3 dB

PHONO Max. Allowable

Input:

(1 kHz) 350 mV
(Higher harmonic distortion factor: 0.1%)

SN Ratio:

PHONO 70 dB (1HF, short circuit, A network)
AUX 90 dB (1HF, short circuit, A network)

■ Mic-Amplifier

Impedance:

4 mV (20 kΩ)

Full Higher Harmonic

Distortion Factor: 0.35% (1 kHz)

Rated Output:

MIC MIX REC. OUT 1 V

Power Source Voltage:

AC 120 V 60 Hz (USA/Canada)
AC 220/240 V, 50 Hz (Europe/England/Sweden)

Power Consumption:

200 W (AC 120 V, 60 Hz)

Applied Semiconductor:

340 W (220/240 V ~ 50 Hz)

Dimensions (m/m):

43 Transistors, 16 Diodes

Weight:

450 x 148 x 375
11.5 kg

CONTENTS

1. TECHNICAL POINTS	3 to 4
2. OPERATING CONTROLS	5
FRONT VIEW	5
REAR VIEW	5
3. DISASSEMBLY INSTRUCTIONS	6
4. CIRCUIT ADJUSTMENT	7
POWER TRANSISTOR IDLING CURRENT ADJUSTMENT	7
5. LEVEL DIAGRAM	8
6. BLOCK DIAGRAM	9
7. EXPLODED VIEW (CABINET)	10
8. P.C. BOARD PART LOCATIONS	11
Figure 16. Power Amp. P.C. Board (CCT-PA-C16)	11
Figure 17. Tone Amp. P.C. Board (CCT-AF-C51)	11
Figure 18. Mic. Amp. P.C. Board (MIC-C04)	11
Figure 19. EQ. Amp. P.C. Board (CCT-AF-C50)	11
9. SCHEMATIC DIAGRAM	12
10. PARTS LIST	13 to 16

1. TECHNICAL POINTS

PARALLEL PUSH-PULL

Figure 1 shows common pure complementary output circuit. Connecting these circuit in parallel composes such a circuit as shown in figure 2. This circuit is called parallel push-pull.

Para-push provides a necessary output signal using a transistor which has not enough collector loss to obtain a necessary output signal. Resistors R1 to R4 in figure 2 rectify unevenness of each transistor's V_{be} and adjust a slight unbalance of characteristics between transistors. TR1 and TR2 provide amplifier with linearity and TR3 and TR4 unify the linearity effectively, thereby providing products which have a definite linearity to some extent.

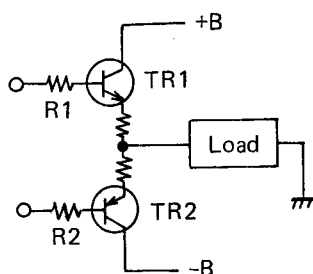


Figure 1

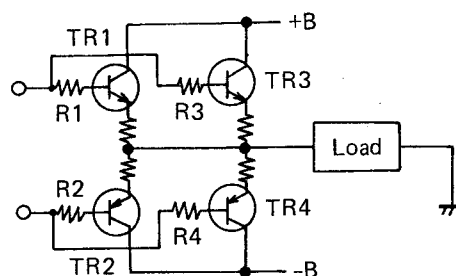


Figure 2

EQUALIZER AMPLIFIER USING BIPOLAR POWER

Use of bipolar power allows A to C points in figure 3 to be kept at 0V (Same potential as ground) and prevents the leakage of capacitor C1 in figure 3, thereby preventing the damage by current leakage.

(For example: switch shock noise of selector switch.).

By combining high metal film fixed resistors and polypropylene capacitors for RIAA element, RIAA difference is reduced within $\pm 3\text{dB}$.

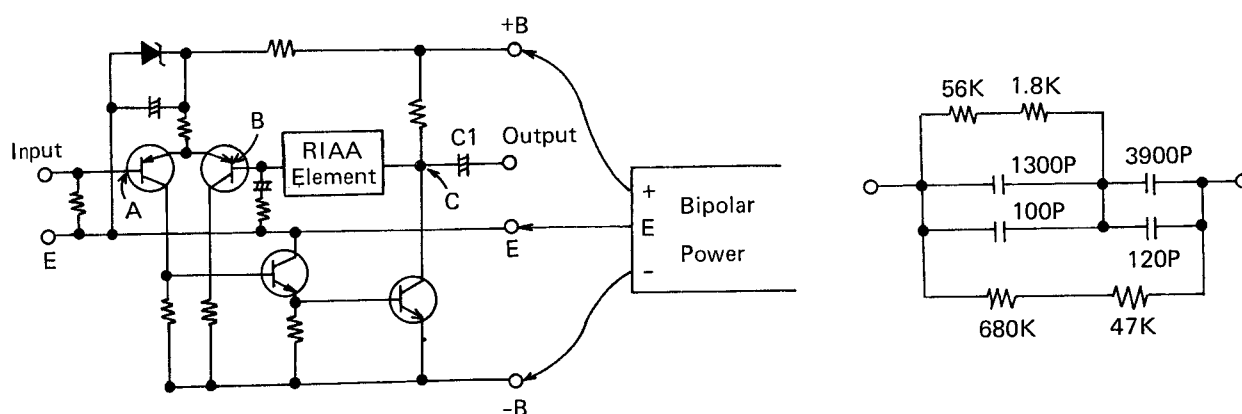


Figure 3

POWER ON-OFF SHOCK NOISE MUTING CIRCUIT

This circuit mutes the amplifier when the power switch is turned ON and protects the speaker from click noise. Capacitor C1 starts charging by the current flowing through resistor R4 immediately after the power switch is turned ON, and transistors TR3 and TR4 are turned ON by the current passing through resistor R3. Input signal (Click noise) is divided by internal resistance of R1 and TR4, and of R2 and TR3 to lower the output level. The internal resistance of transistor which is turned ON is too weak as compared with R1 and R2 to obtain output signal. When the voltage at both terminals of C1 comes to a certain level after a few seconds, TR2 is turned ON and the voltage of negative power which consists of D2, R7 and C2 is applied to the bases of TR3 and TR4 to turn OFF the TR3 and TR4, thereby increasing the internal resistance of TR3 and TR4, and consequently output signal can be obtained without reduction. Any click noise which enters the input signal for these seconds does not present in output signal.

When power switch is turned OFF, the negative power reduces to 0V preceding to +B, emitter potential of TR1 is increased by potential of C1, TR1 is turned ON and C1 is discharged promptly. Then TR2 is turned OFF and +B voltage is applied to TR3 and TR4 through TR3.

As +B voltage reduces slowly even after the power is turned OFF, TR3 and TR4 can be kept to be ON for a certain time during which muting circuit can be activated and click noise that occurs when power is turned OFF can be eliminated.

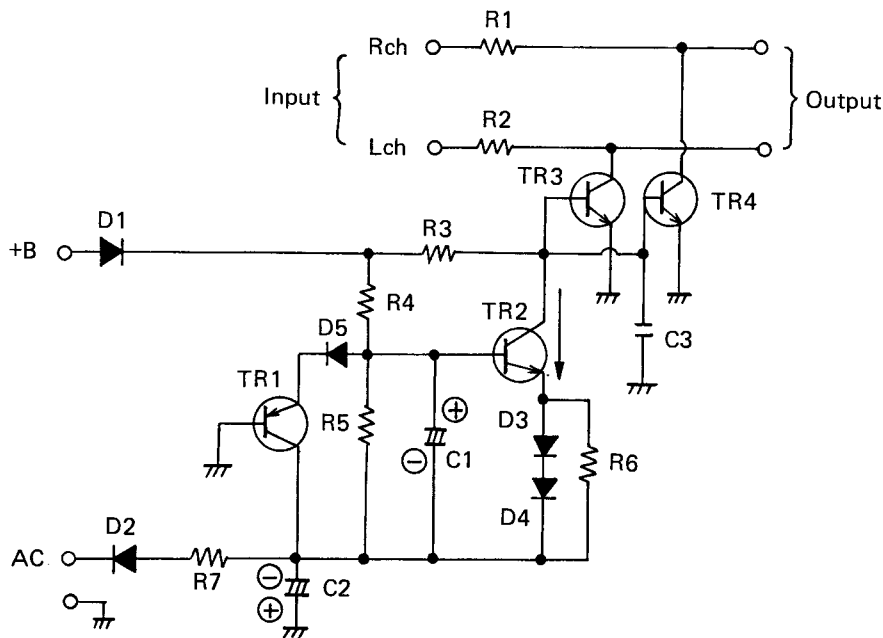


Figure 4

2. OPERATING CONTROLS

FRONT VIEW

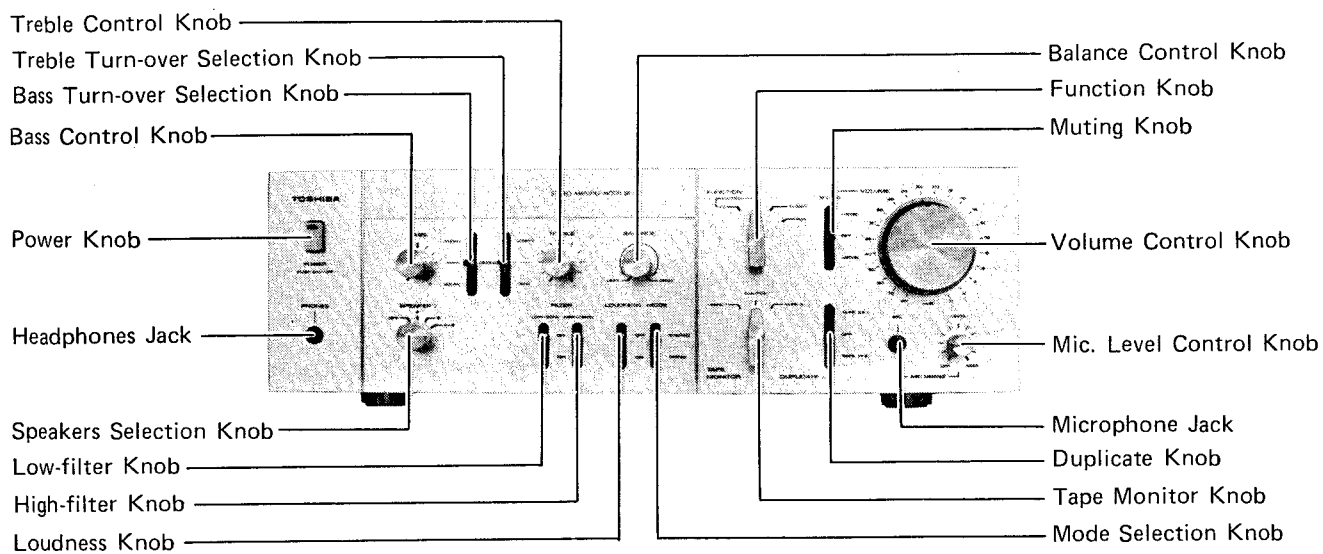


Figure 5

REAR VIEW

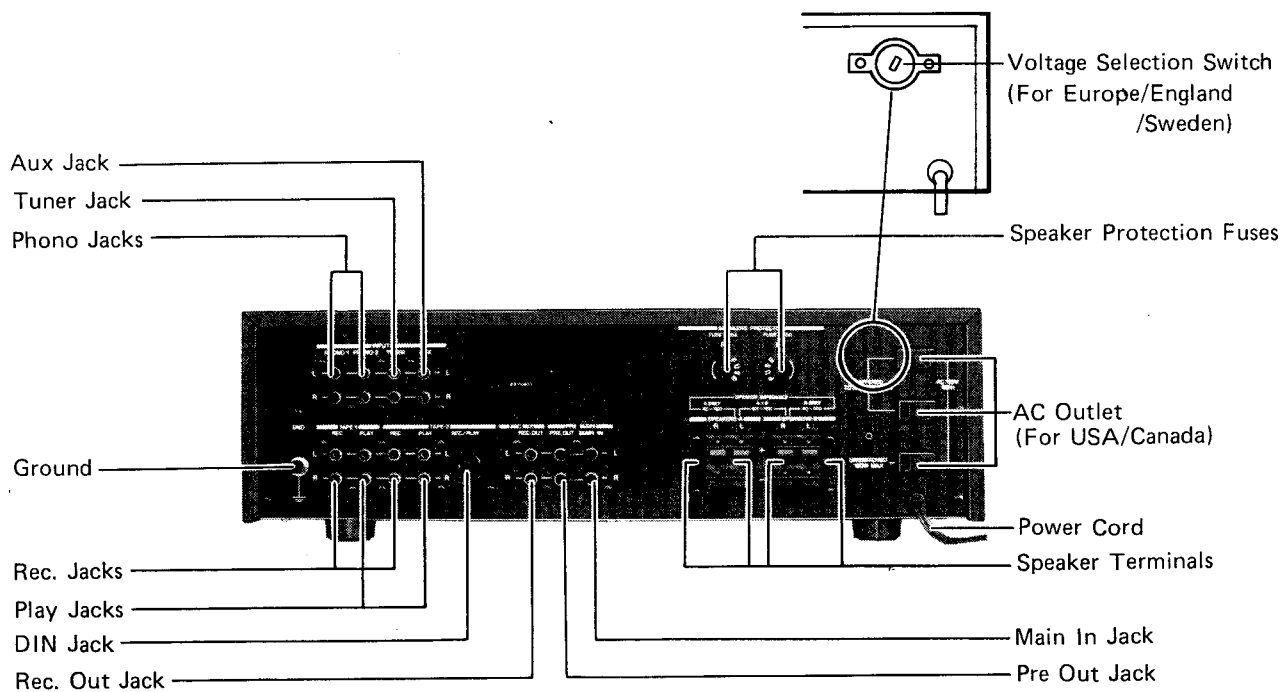


Figure 6

3. DISASSEMBLY INSTRUCTIONS

TOP COVER REMOVAL

1. Remove four screws (①).
See figure 7.

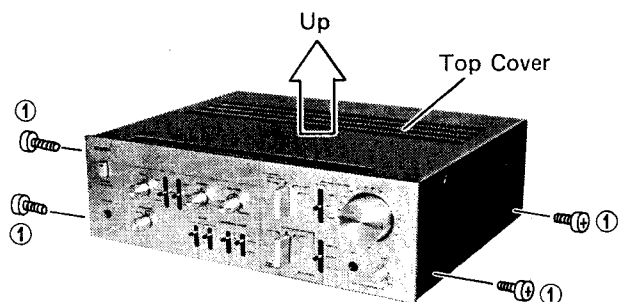


Figure 7

BOTTOM COVER REMOVAL

1. Remove five screws (②).
See figure 8.

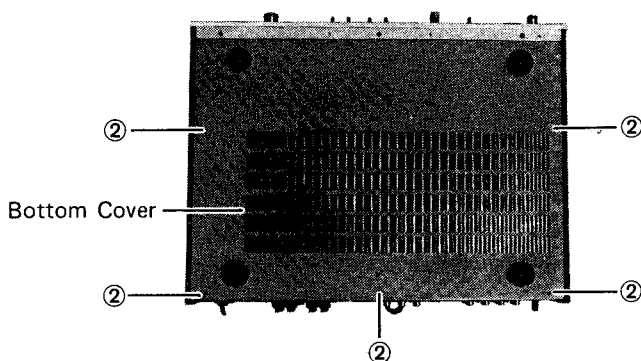


Figure 8

FRONT PANEL REMOVAL

1. Pull out the seven knobs (③). See figure 9.

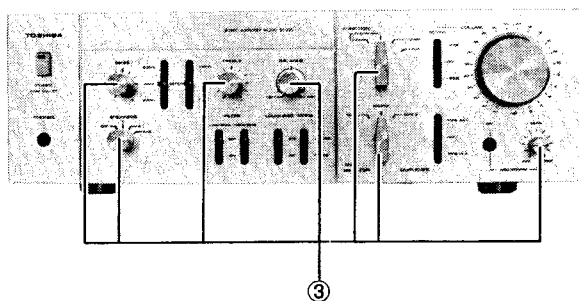


Figure 9

2. Remove two screws (④).
See figure 10.

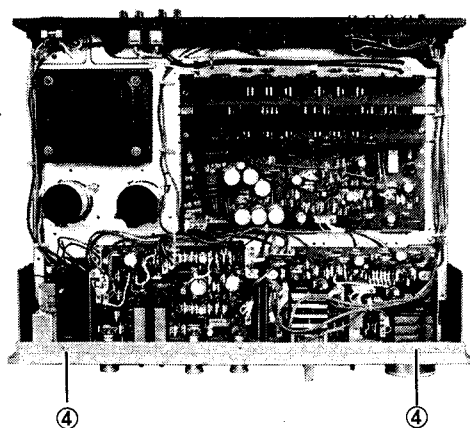


Figure 10

3. Remove two screws (⑤).
See figure 11.

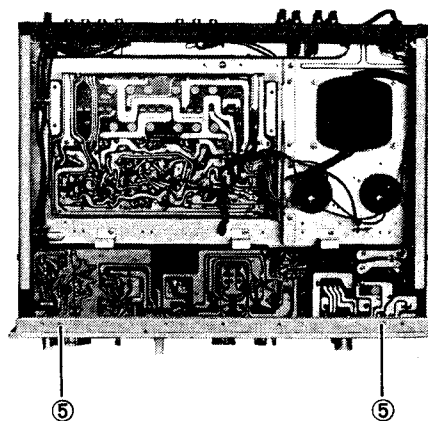


Figure 11

4. CIRCUIT ADJUSTMENTS

POWER TRANSISTOR IDLING CURRENT ADJUSTMENT

While there is no signal (Connect 8 ohm when loading), connect tester to TP001 and TP002 on power amp. P.C. Board and rotate and adjust semi-fixed resistors VR005 and VR006 so that the readings on tester is values described below.

		Reading on tester
R channel TP001	VR005 adjustment	When radiator is warmed 0.015V
L channel TP002	VR006 adjustment	When radiator is cold 0.008V

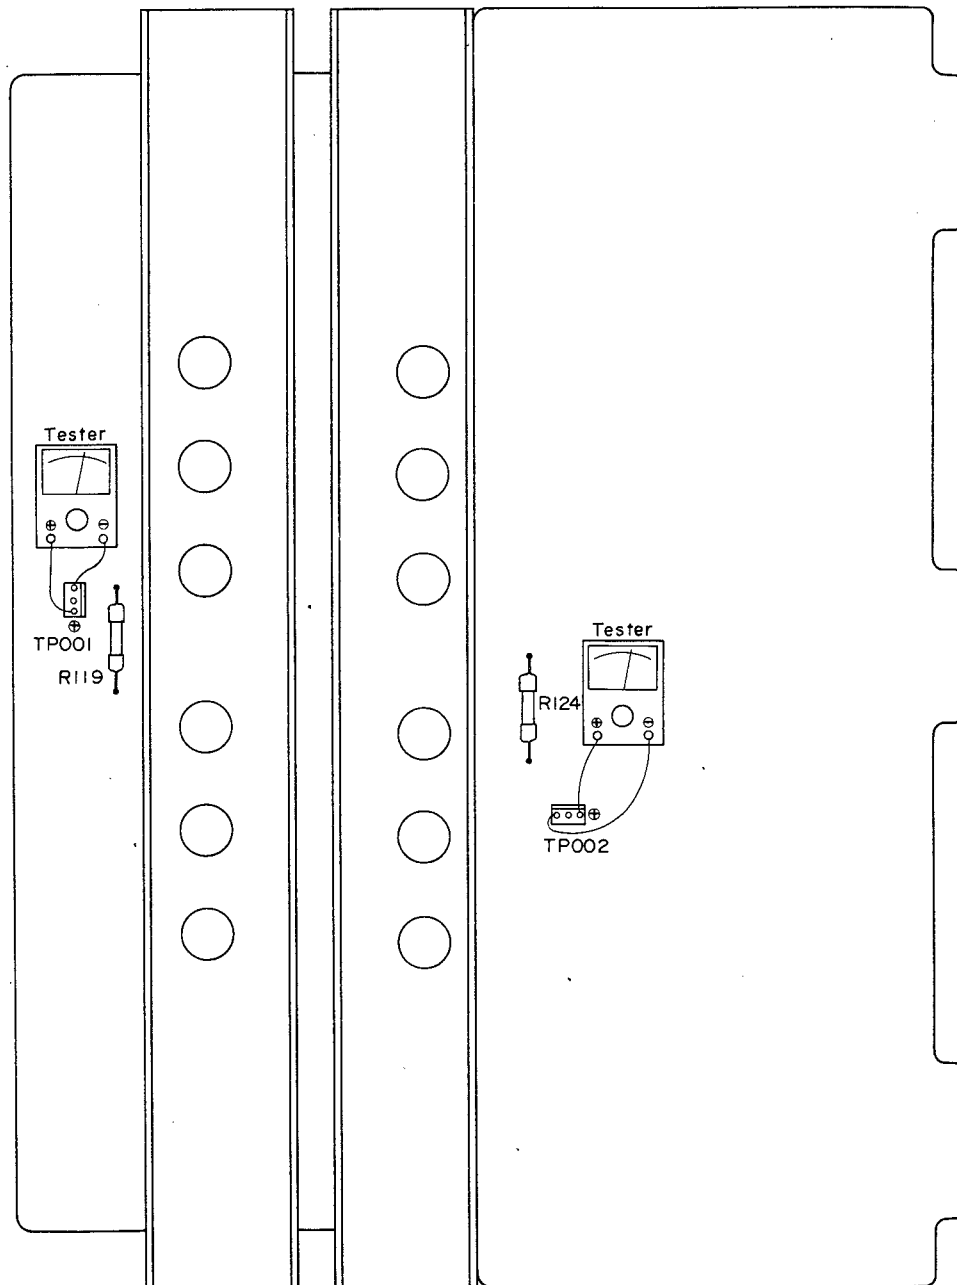


Figure 12. Top View of Power Amp. P.C. Board

5. LEVEL DIAGRAM

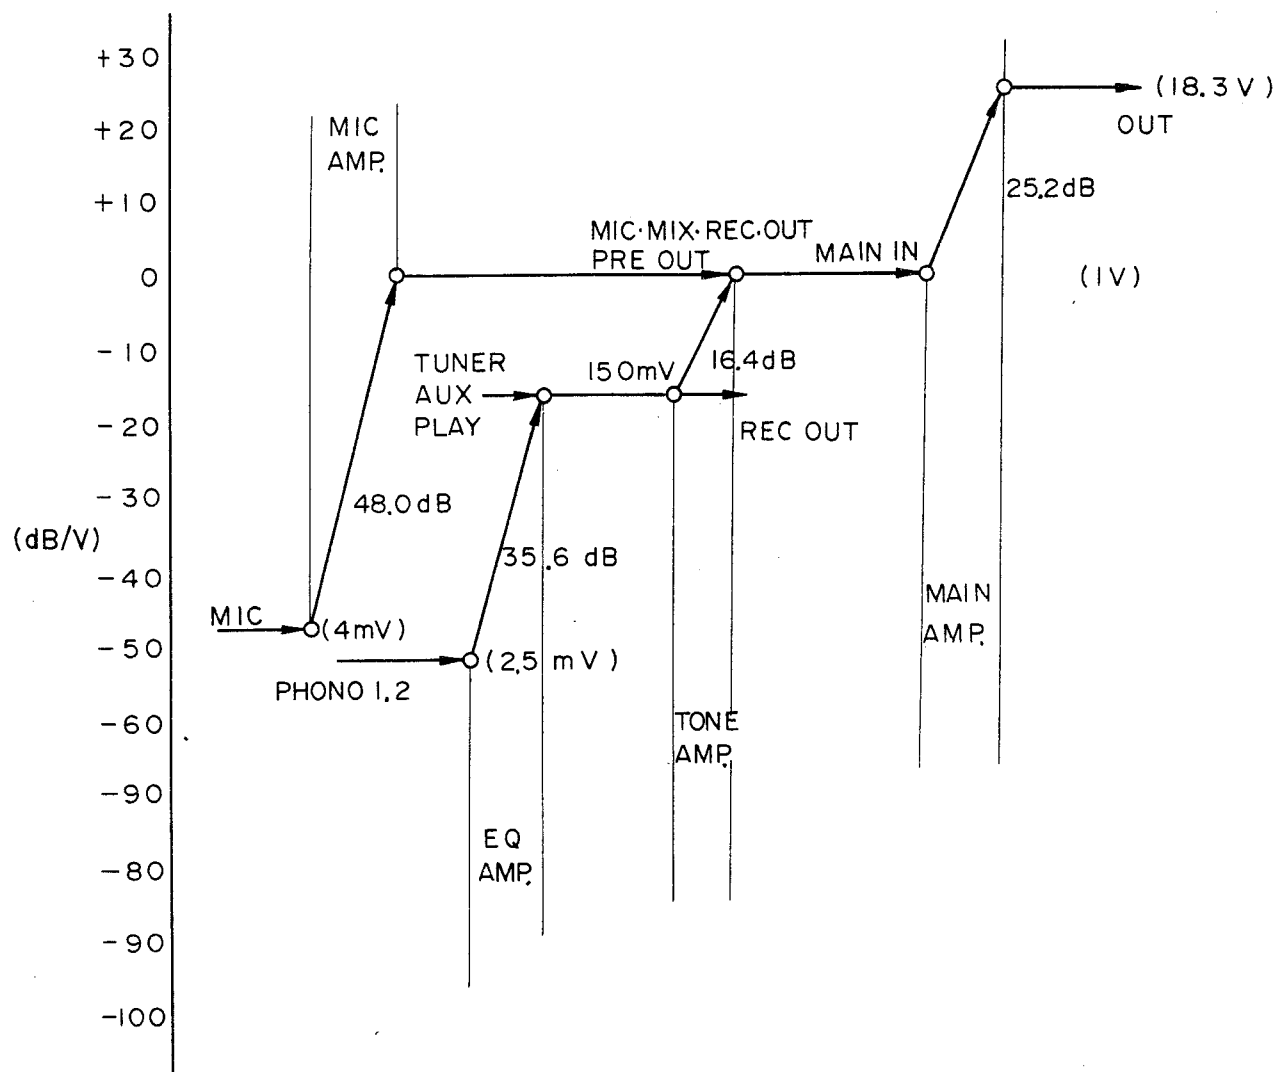


Figure 13

6. BLOCK DIAGRAM

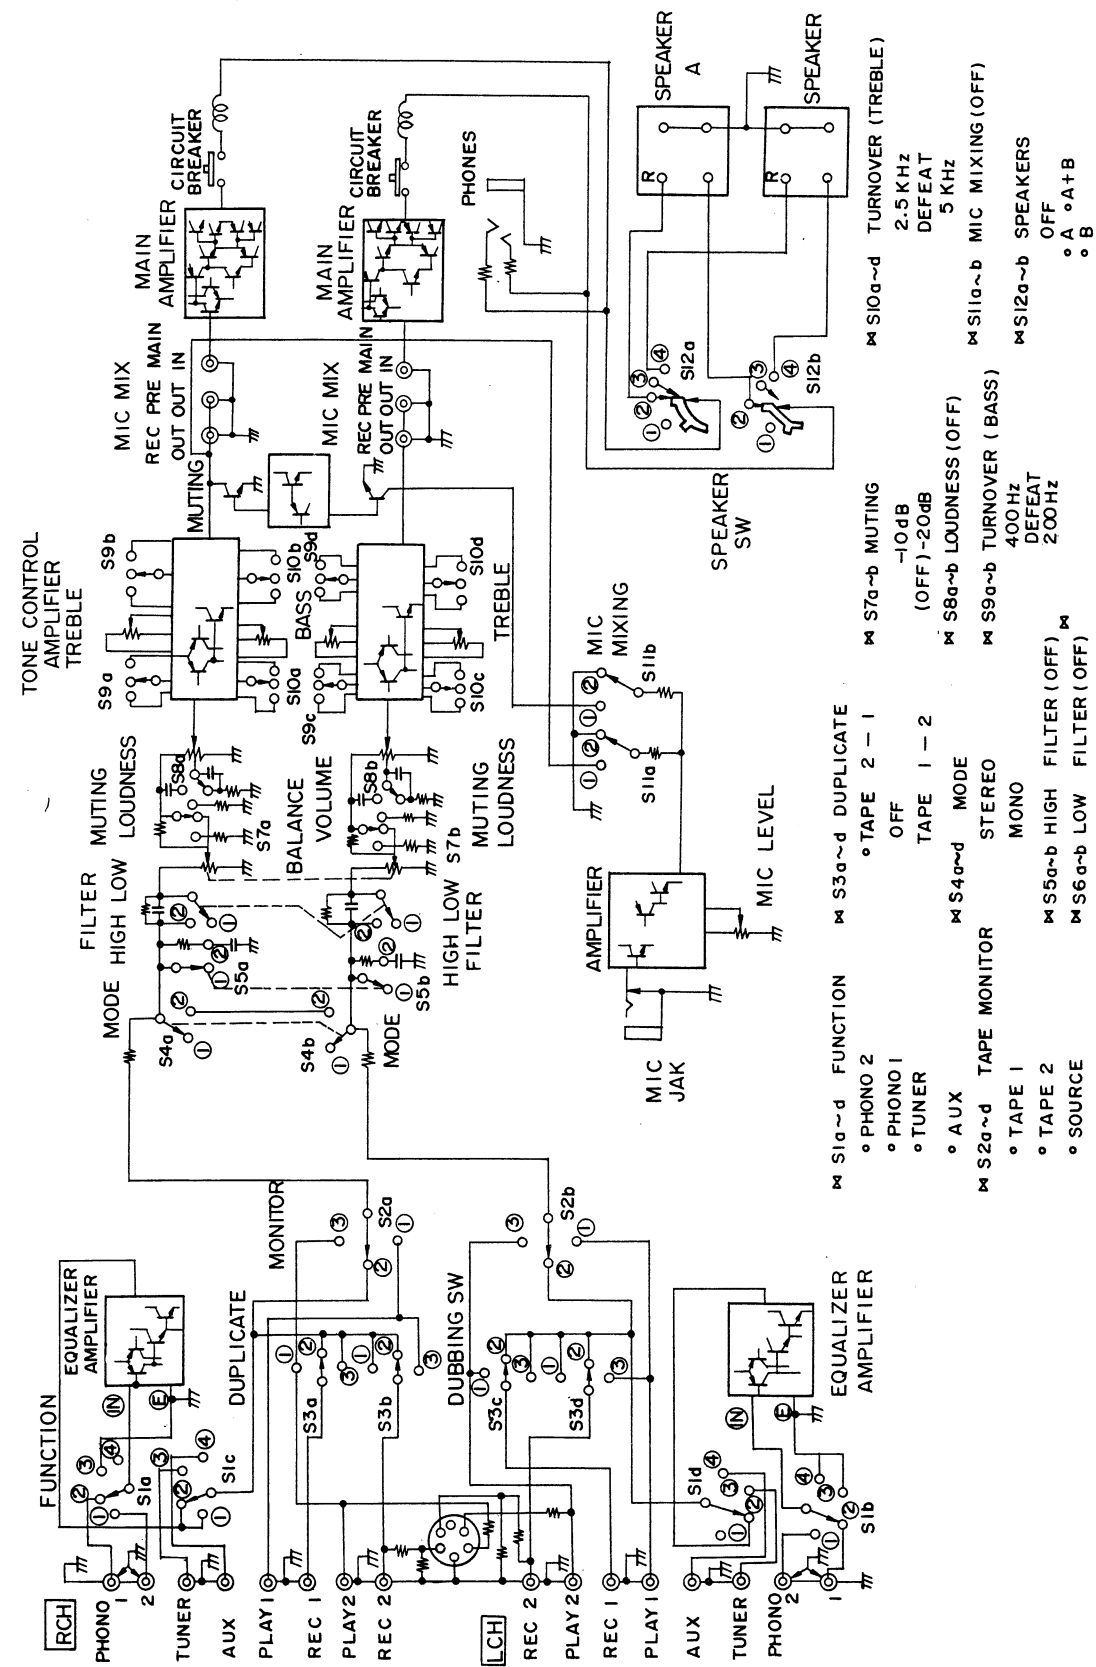


Figure 14.

7. EXPLODED VIEW (CABINET)

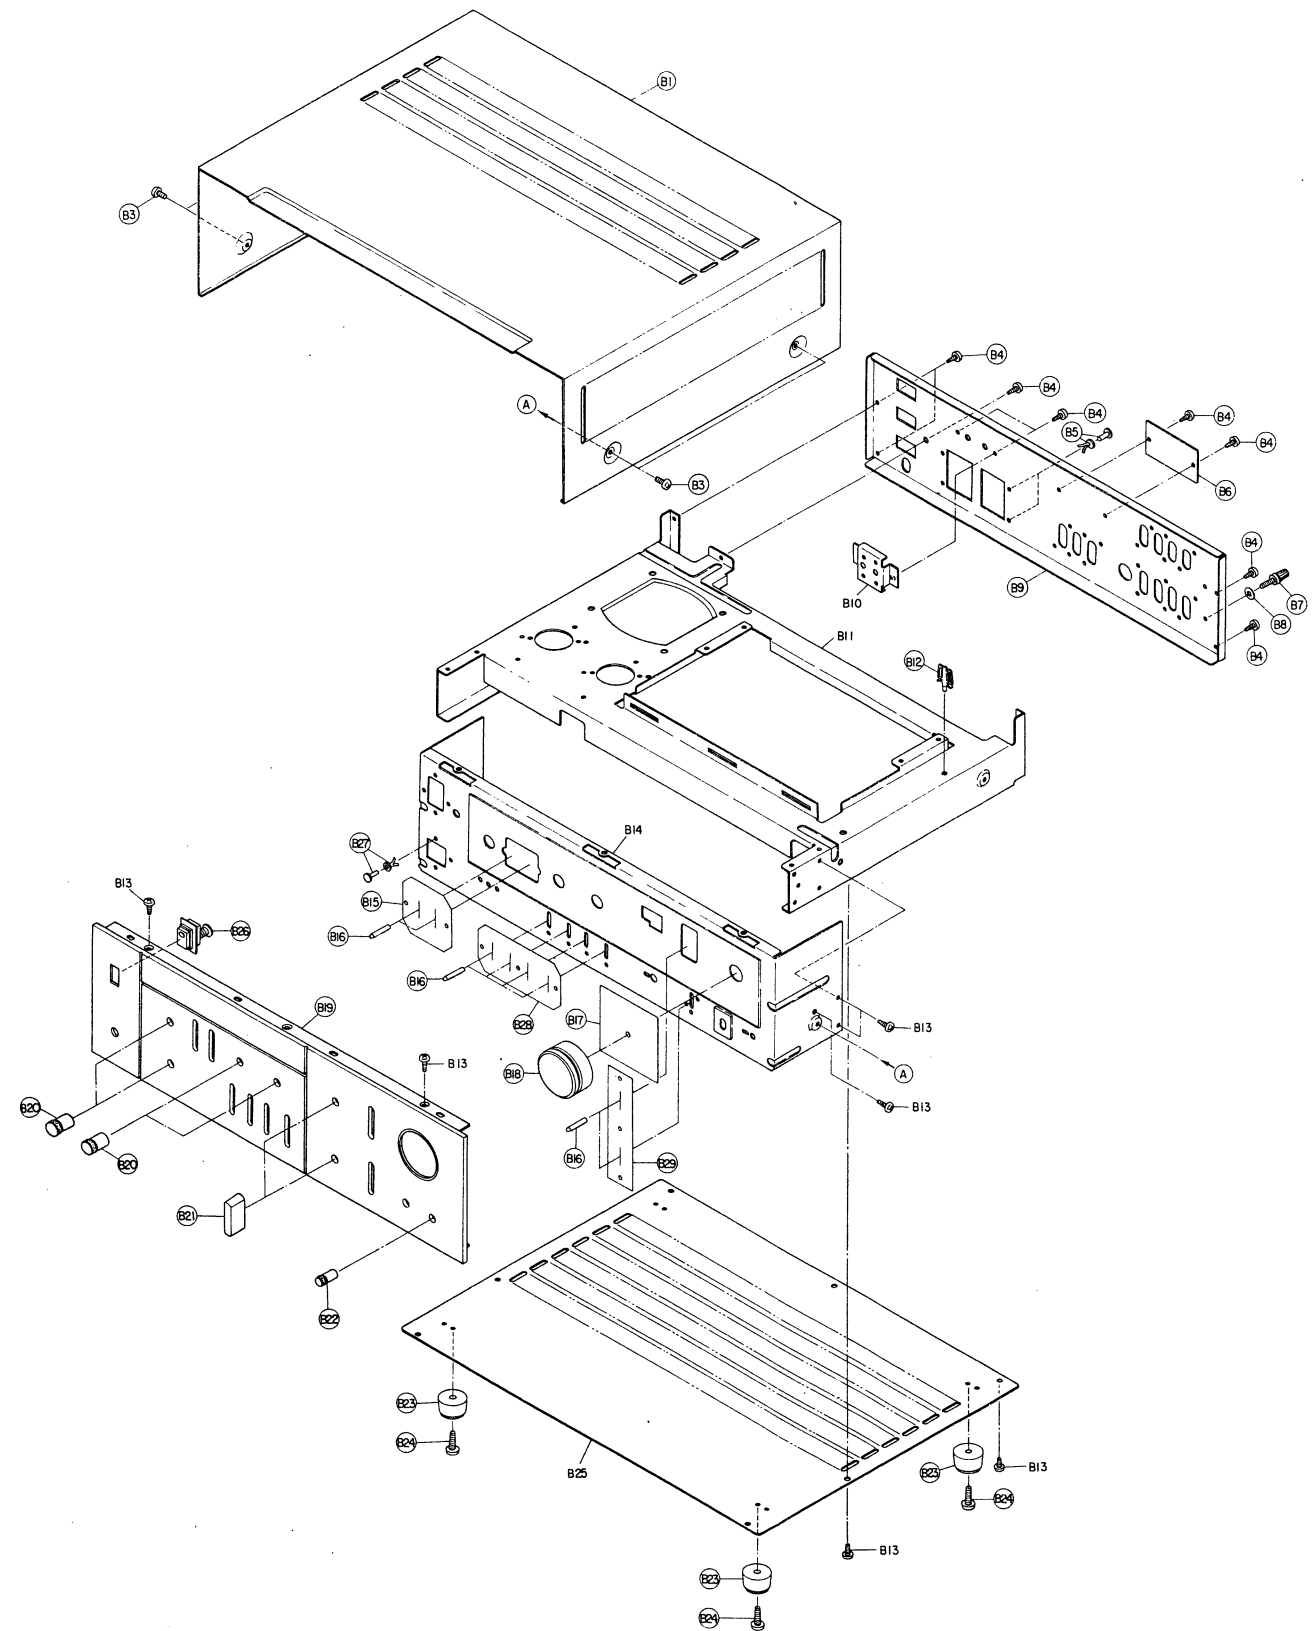


Figure 15

8. P.C. BOARD PARTS LOCATIONS

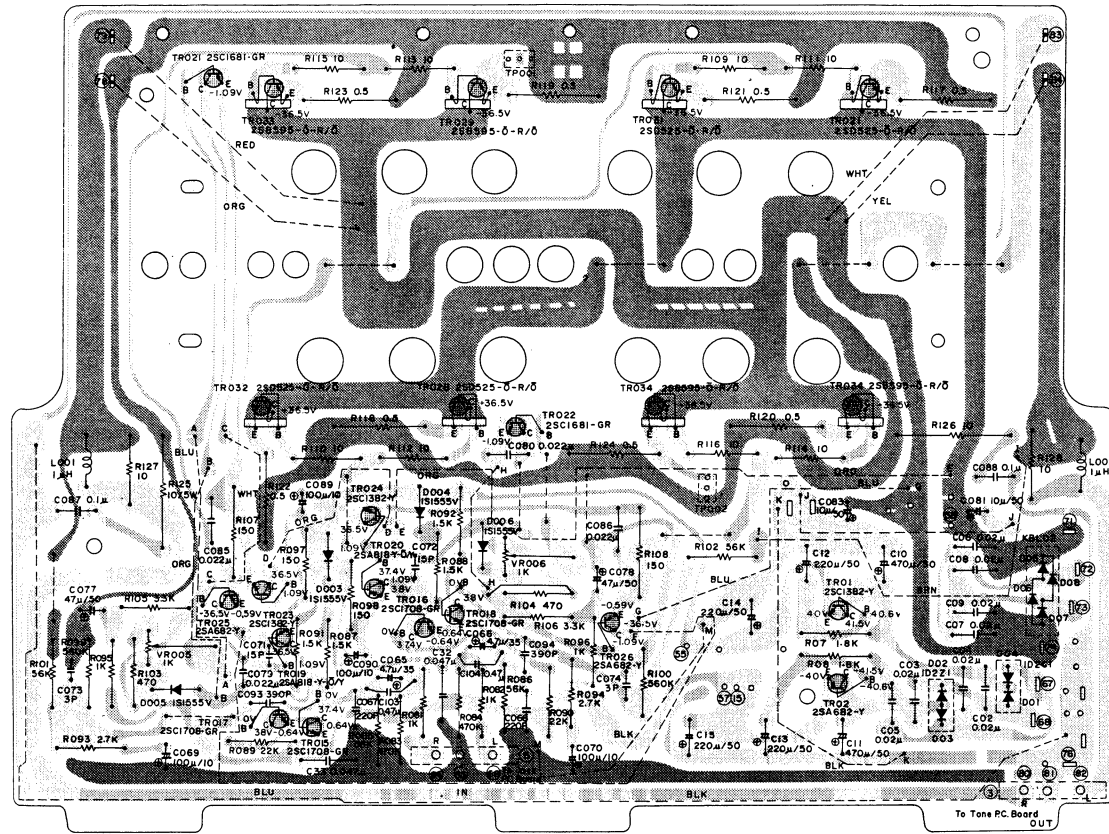


Figure 16. Bottom View of Power Amp. P.C. Board (CCT-PA-C16).

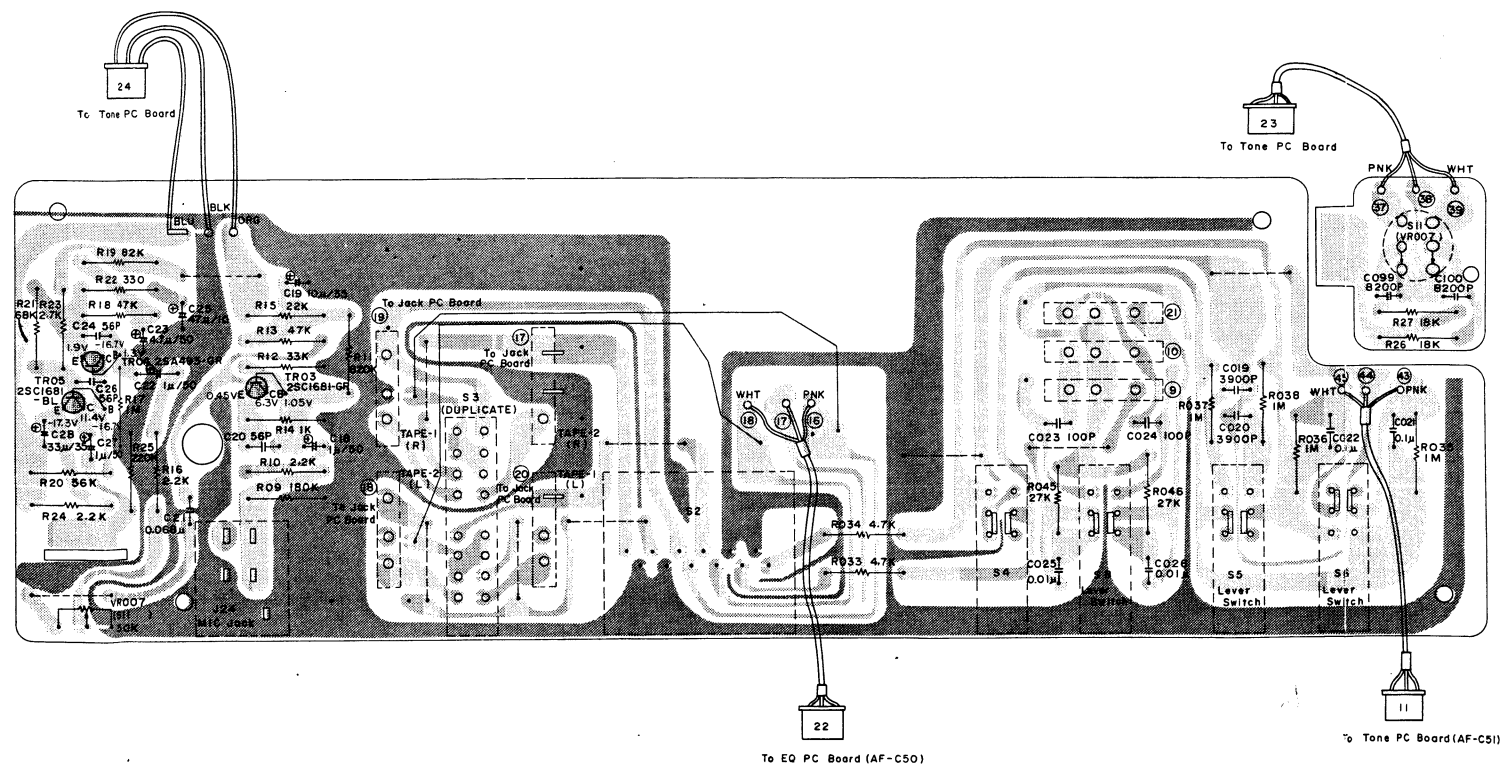


Figure 17. Bottom View of Mic. Amp. P.C. Board (MIC-C04).

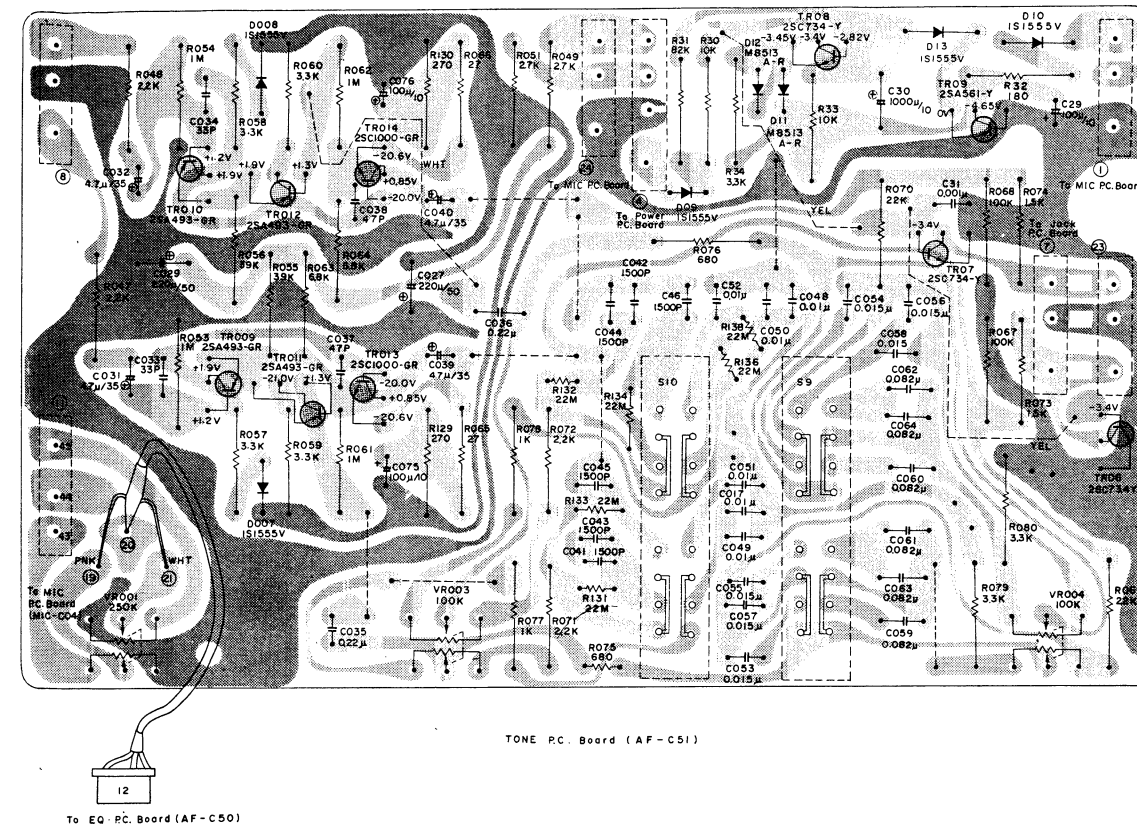


Figure 18. Bottom View of Tone Amp. P.C. Board (CCT-AF-C51).

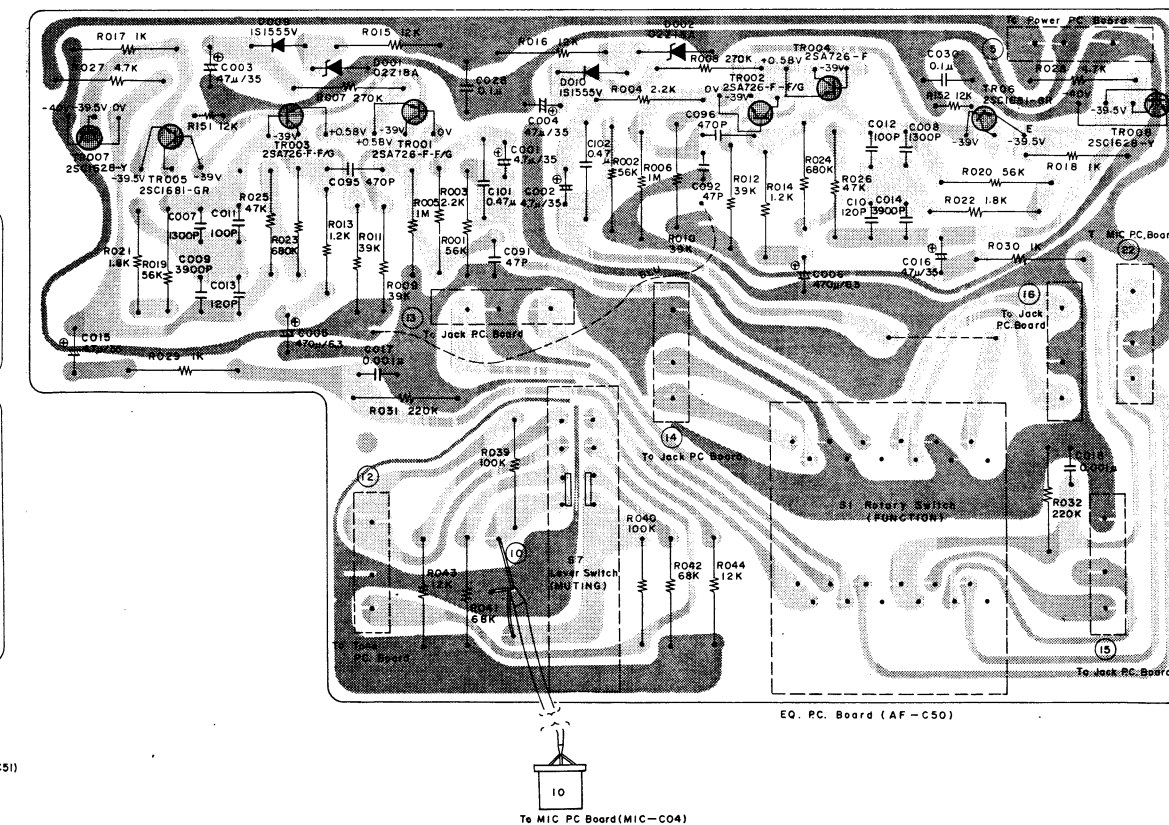


Figure 19. Bottom View of EQ. Amp. P.C. Board (CCT-AF-C50).

9. SCHEMATIC DIAGRAM

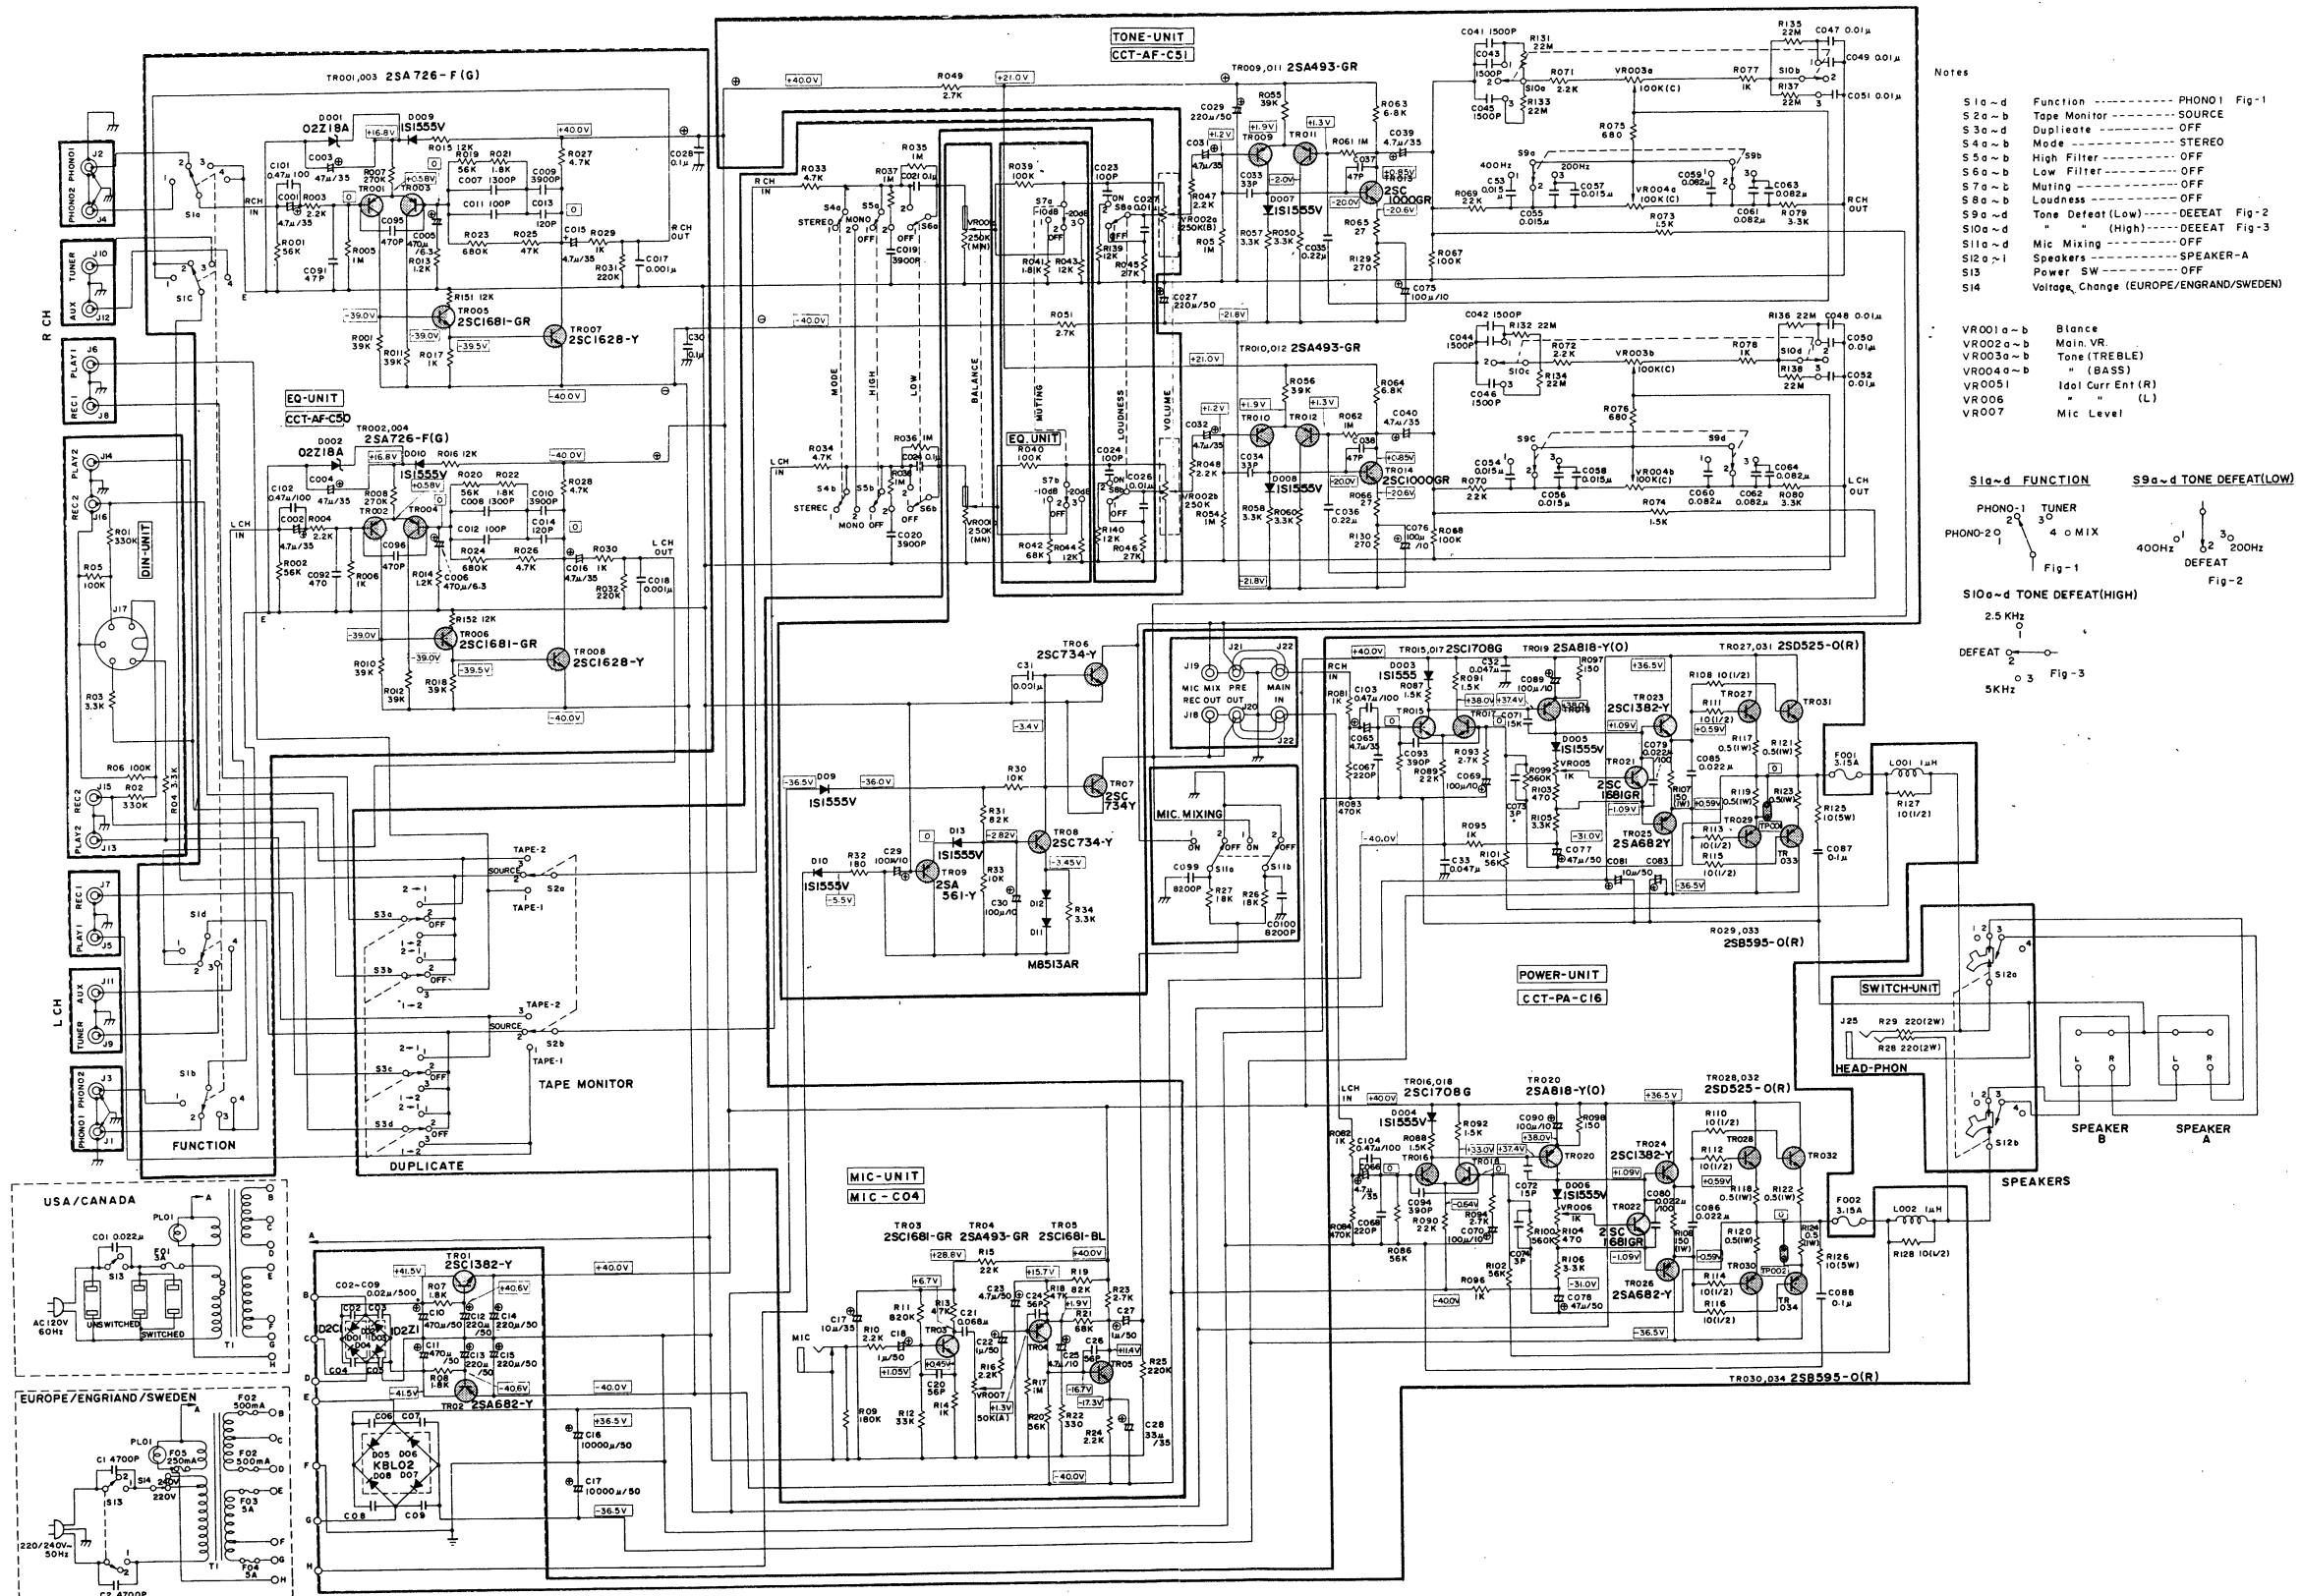


Figure 20

10. PARTS LIST

Symbol No.	Part No.	Description	Symbol No.	Part No.	Description	Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
TRANSISTORS AND DIODES			D13		Diode, 1S1555V	CAPACITORS			C009, 010	22321077	Polypropylene, 3900pF, 100V, G
			D007, 008		Diode, 1S1555V	G=±2%, J=±5%, K=±10%, M=±20%, Z=-20+80%, D=±0.5pF			C011, 012	22381101	Polystyrene, 100pF, 50V, J
			ELECTRICAL PARTS			CCT-PA-C16			C013, 014	22381121	Polystyrene, 120pF, 50V, J
CCT-PA-C16		Transistor, 2SC1382-Y	S1	22146757	Switch, Rotary, Function	C02, 03, 04, 05	22340032	Ceramic, 0.02mfd, 500V, Z	C015, 016	22440052	Electrolytic, 4.7mfd, 35V
TR01		Transistor, 2SA682-Y	S2	22146758	Switch, Rotary, Monitor	C06, 07, 08 09	22340032	Ceramic, 0.02mfd, 500V, Z	C017, 018	22372102	Mylar, 0.001mfd, 50V, K
TR02		Transistor, 2SC1708-GR	S3	22146763	Switch, Lever, Duplicate	C10, 11	22448471	Electrolytic, 470mfd, 50V	C028	22372104	Mylar, 0.1mfd, 50V, K
TR015, 016	22114438	Transistor, 2SC1708-GR	S4, 5, 6, 8	22146762	Switch, Lever	C12, 13	22448221	Electrolytic, 220mfd, 50V	C030	22372104	Mylar, 0.1mfd, 50V, K
TR017, 018	22114438	Transistor, 2SC1708-GR	S7	22146764	Switch, Lever, Muting	C14, 15	22448221	Electrolytic, 220mfd, 50V	C091, 092	22362470	Ceramic, 47pF, 50V, K
TR019, 020		Transistor, 2SA818-Y-O/Y	S9, 10	22146767	Switch, Lever, Tone	C32	22342473	Ceramic, 0.047mfd, 50V, Z	C095, 096	22382471	Polystyrene, 470pF, 50V, K
TR021, 022		Transistor, 2SC1681-GR	S12	22146727	Switch, Rotary, Speaker	C33	22342473	Ceramic, 0.047mfd, 50V, Z	C101, 102	22370168	Mylar, 0.47mfd, 100V, K
TR023, 024		Transistor, 2SC1382-Y-O/Y	S13	22146759	Switch, Push, Power (USA/Canada)	C065, 066	22440052	Electrolytic, 4.7mfd, 35V	CCT-AF-C51		
TR025, 026		Transistor, 2SA682-Y-O/Y		22146204	Switch, Push, Power (Europe/England/Sweden)	C067, 068	22382221	Polystyrene, 220pF, 50V, K	C29	22443101	Electrolytic, 100mfd, 10V
TR027, 028		Transistor, 2SD525-O-R/O	S14	22146707	Switch, Rotary, Voltage (Europe/England/Sweden)	C069, 070	22443101	Electrolytic, 100mfd, 10V	C30	22443102	Electrolytic, 1000mfd, 10V
TR029, 030		Transistor, 2SB595-O-R/O	L001, 002	22210107	Coil, Trap, 1μH	C071, 072	22362150	Ceramic, 15pF, 50V, K	C31	22372102	Mylar, 0.001mfd, 50V, K
TR031, 032		Transistor, 2SD525-O-R/O	J1, 2, 3, 4	22163446	Jack, US4P	C073, 074	22361309	Ceramic, 3pF, 50V, D	C027	22448221	Electrolytic, 220mfd, 50V
TR033, 034		Transistor, 2SB595-O-R/O	J5, 6, 7, 8	22163443	Jack, US4P	C077, 078	22448470	Electrolytic, 47mfd, 50V	C029	22448221	Electrolytic, 220mfd, 50V
MIC-C04			J9, 10, 11, 12	22163443	Jack, US4P	C079, 080	22321128	Polypropylene, 0.022mfd, 100V, J	C031, 032	22440052	Electrolytic, 4.7mfd, 35V
TR03		Transistor, 2SC1681-GR	J13, 14, 15, 16, 17	22163445	Jack, US4P, DIN	C081, 083	22448100	Electrolytic, 10mfd, 50V	C033, 034	22362330	Ceramic, 33pF, 50V, K
TR04		Transistor, 2SA841-GR	J18, 19, 20, 21, 22, 23	22163444	Jack, US6P	C085, 086	22373223	Mylar, 0.022mfd, 50V, M	C035, 036	22371224	Mylar, 0.22mfd, 50V, J
TR05		Transistor, 2SC1681-BL	J24	22163517	Jack, Microphone	C087, 088	22373104	Mylar, 0.1mfd, 50V, M	C037, 038	22362470	Ceramic, 47pF, 50V, K
CCT-AF-C50			J25	22163519	Jack, Headphones	C089, 090	22443101	Electrolytic, 100mfd, 10V	C039, 040	22440052	Electrolytic, 4.7mfd, 35V
TR001, 002	22114405	Transistor, 2SA726-F-F/G	F01	22144235	Fuse, 3A/250V (USA/Canada)	C093, 094	22382391	Polystyrene, 390pF, 50V, K	C041, 042	22371152	Mylar, 1500pF, 50V, J
TR003, 004	22114405	Transistor, 2SA726-F-F/G	F01, 02	22144295	Fuse, 500mA/250V (Europe/England/Sweden)	C103, 104	22370168	Mylar, 0.47mfd, 100V, K	C043, 044	22371152	Mylar, 1500pF, 50V, J
TR005, 006		Transistor, 2SC1681-GR	F03, 04	22144335	Fuse, 5A/250V (Europe/England/Sweden)	MIC-C04			C045, 046	22371152	Mylar, 1500pF, 50V, J
TR007, 008		Transistor, 2SC1628-Y	F05	22144289	Fuse, 250mA/250V (Europe/England/Sweden)	C18	22440060	Electrolytic, 1mfd, 50V	C047, 048	22371103	Mylar, 0.01mfd, 50V, J
CCT-AF-C51			F001, 002	22144332	Fuse, 3.15A/125V (USA/Canada)	C19	22447100	Electrolytic, 10mfd, 35V	C049, 050	22371103	Mylar, 0.01mfd, 50V, J
TR06		Transistor, 2SC734-Y	F001, 002	22144310	Fuse, 3.15A/250V (Europe/England/Sweden)	C20	22362560	Ceramic, 56pF, 50V, K	C051, 052	22371103	Mylar, 0.01mfd, 50V, J
TR07		Transistor, 2SC734-Y		22165063	Holder, Fuse (USA/Canada)	C21	22372683	Mylar, 0.068mfd, 50V, K	C053, 054	22371153	Mylar, 0.015mfd, 50V, J
TR08		Transistor, 2SC734-Y		22165075	Holder, Fuse (England/Europe/Sweden)	C22	22440060	Electrolytic, 1mfd, 50V	C055, 056	22371153	Mylar, 0.015mfd, 50V, J
TR09		Transistor, 2SA561-Y		22176221	Cord, Power (USA/Canada)	C23	22448479	Electrolytic, 4.7mfd, 50V	C057, 058	22371153	Mylar, 0.015mfd, 50V, J
TR009, 010		Transistor, 2SA841-GR		22176286	Cord, Power (Europe)	C24	22362560	Ceramic, 56pF, 50V, K	C059, 060	22371823	Mylar, 0.082mfd, 50V, J
TR011, 012		Transistor, 2SA841-GR		22176547	Cord, Power (England)	C25	22443470	Electrolytic, 47mfd, 10V	C061, 062	22371823	Mylar, 0.082mfd, 50V, J
TR013, 014		Transistor, 2SC1000-GR		22176540	Cord, Power (Sweden)	C26	22362560	Ceramic, 56pF, 50V, K	C063, 064	22371823	Mylar, 0.082mfd, 50V, J
CCT-PA-C16			T1	22223067	Transformer, Power (USA)	C27	22440060	Electrolytic, 1mfd, 50V	C075, 076	22443101	Electrolytic, 100mfd, 10V
D01, 04		Diode, 1D2C1		22223068	Transformer, Power (Europe/Sweden)	C28	22447330	Electrolytic, 33mfd, 35V	OTHERS		
D02, 03		Diode, 1D2Z1		22213502	Transformer, Power (England)	C019, 020	22372392	Mylar, 3900pF, 50V, K	C01	22321206	Film, 0.022mfd, 125V, M (USA/Canada)
D05, 06, 07, 08	22115293	Diode, KBL02		22213517	Transformer, Power (Canada)	C021, 022	22372104	Mylar, 0.1mfd, 50V, K	C01, 02	22340090	Ceramic, 4700pF, 250V, Z (Europe/England/Sweden)
D003, 004		Diode, 1S1555V				C023, 024	22382101	Polystyrene, 100pF, 50V, K	C16, 17	22430047	Electrolytic, 10000mfd, 50V
D005, 006		Diode, 1S1555V				C025, 026	22372103	Mylar, 0.01mfd, 50V, K	RESISTORS		
CCT-AF-C50						C099, 100	22372822	Mylar, 8200pF, 50V, K	All resistors are 1/4W, 5% carbon film resistor unless otherwise noted. K=±10%, F=±1%		
D001, 002		Diode, 02Z18A				CCT-AF-C50			CCT-PA-C16		
D009, 010		Diode, 1S1555V				C001, 002	22440052	Electrolytic, 4.7mfd, 35V	R07, 08	22545182	1.8K ohm
CCT-AF-C51						C003, 004	22447470	Electrolytic, 47mfd, 35V	R081, 082	22545102	1K ohm
D09		Diode, 1S1555V				C005, 006	22440114	Electrolytic, 470mfd, 6.3V	R083, 084	22545474	470K ohm
D10		Diode, 1S1555V				C007, 008	22321076	Polypropylene, 1300pF, 100V, G	R085, 086	22545563	56K ohm
D11		Diode, M8513A-R							R087, 088	22545152	1.5K ohm
D12		Diode, M8513A-R									

Symbol No.	Part No.	Description
R089, 090	22545223	22K ohm
R091, 092	22545152	1.5K ohm
R093, 094	22545272	2.7K ohm
R095, 096	22545102	1K ohm
R097, 098	22545151	150 ohm
R099, 100	22545564	560K ohm
R101, 102	22545563	56K ohm
R103, 104	22500114	470 ohm, 1/4W, Fusible
R105, 106	22545332	3.3K ohm
R107, 108	22570088	150 ohm, 1W, Metal Oxide Film
R109, 110	22563100	10 ohm, 1/2W, Solid Carbon
R111, 112	22563100	10 ohm, 1/2W, Solid Carbon
R113, 114	22563100	10 ohm, 1/2W, Solid Carbon
R115, 116	22563100	10 ohm, 1/2W, Solid Carbon
R117, 118	22570031	0.5 ohm, 1W, Metal Oxide Film
R119, 120	22570031	0.5 ohm, 1W, Metal Oxide Film
R121, 122	22570031	0.5 ohm, 1W, Metal Oxide Film
R123, 124	22570031	0.5 ohm, 1W, Metal Oxide Film
R125, 126	22500047	10 ohm, 5W, Wire Wound
R127, 128	22563100	10 ohm, 1/2W, Solid Carbon
MIC-C04		
R09	22545184	180K ohm
R10	22545222	2.2K ohm
R11	22545824	820K ohm
R12	22545333	33K ohm
R13	22545473	47K ohm
R14	22545102	1K ohm
R15	22545223	22K ohm
R16	22545222	2.2K ohm
R17	22545105	1M ohm
R18	22545473	47K ohm
R19	22545823	82K ohm
R20	22545563	56K ohm
R21	22545683	68K ohm
R22	22545331	330 ohm
R23	22545272	2.7K ohm
R24	22545222	2.2K ohm
R25	22545224	220K ohm
R26	22545183	18K ohm
R27	22545183	18K ohm
R033, 034	22545472	4.7K ohm
R035, 036	22545105	1M ohm
R037, 038	22545105	1M ohm
R045, 046	22545273	27K ohm
CCT-AF-C50		
R001, 002	22545563	56K ohm
R003, 004	22545222	2.2K ohm
R005, 006	22545105	1M ohm
R007, 008	22545274	270K ohm
R009, 010	22545393	39K ohm
R011, 012	22545393	39K ohm

Symbol No.	Part No.	Description
R013, 014	22545122	1.2K ohm
R015, 016	22545123	12K ohm
R017, 018	22545102	1K ohm
R019, 020	22570105	56K ohm, 1/4W, Metal Oxide Film
R021, 022	22545182	1.8K ohm
R023, 024	22570108	680K ohm, 1/4W, Metal Oxide Film
R025, 026	22545473	47K ohm
R027, 028	22545472	4.7K ohm
R029, 030	22545102	1K ohm
R031, 032	22545224	220K ohm
R039, 040	22545104	100K ohm
R041, 042	22545683	68K ohm
R043, 044	22545123	12K ohm
R151, 152	22555123	12K ohm
CCT-AF-C51		
R30	22545103	10K ohm
R31	22545823	82K ohm
R32	22545181	180 ohm
R33	22545103	10K ohm
R34	22545332	3.3K ohm
R047, 048	22545222	2.2K ohm
R049, 051	22545272	2.7K ohm
R053, 054	22545105	1M ohm
R055, 056	22545393	39K ohm
R057, 058	22545332	3.3K ohm
R059, 060	22545332	3.3K ohm
R061, 062	22545105	1M ohm
R063, 064	22545682	6.8K ohm
R065, 066	22545270	27 ohm
R067, 068	22545104	100K ohm
R069, 070	22545223	22K ohm
R071, 072	22545222	2.2K ohm
R073, 074	22545152	1.5K ohm
R075, 076	22545681	680 ohm
R077, 078	22545102	1K ohm
R079, 080	22545332	3.3K ohm
R129, 130	22545271	270 ohm
R131, 132	22500070	22M ohm, 1/2W, Wire Wound
R133, 134	22500070	22M ohm, 1/2W, Wire Wound
R135, 136	22500070	22M ohm, 1/2W, Wire Wound
R137, 138	22500070	22M ohm, 1/2W, Wire Wound
OTHERS		
R01, 02	22545334	330K ohm
R03, 04	22545332	3.3K ohm
R05, 06	22545104	100K ohm
R28, 29	22570022	220 ohm, 2W, Metal Oxide Film
R139, 140	22555123	12K ohm
VARIABLE RESISTORS		
VR001	22651423	250K ohm, Variable

Symbol No.	Part No.	Description
VR002	22651429	250K ohm, Variable
VR003	22651431	100K ohm, Variable
VR004	22651431	100K ohm, Variable
VR005, 006	22658186	1K ohm, Semi-fixed
VR007	22624400	50K ohm, Variable (With S11)
CABINET PARTS		
B1	22841124	Cover
B3	22707040	Screw, M4 x 6mm
B4	22701326	Tapping Screw, M3 x 8mm
B5	22705022	Rivet, 3ø x 55mm
B6	22863866	Nameplate (USA/Canada)
	22863872	Nameplate (Europe/England/ Sweden)
B7	22162338	Terminal, Ground
B8	22703091	Washer
B9	22711434	Plate, Jack (USA/Canada)
	22711457	Plate, Jack (Europe)
	22711398	Plate, Jack (Sweden/England)
B15	22756462	Sheet, Lever Knob
B16	22845211	Knob, Lever
B17	22756445	Sheet, Volume Knob
B18	22834848	Knob, Volume
B19	22843509	Panel
B20	22834842	Knob Ass'y
B21	22834851	Knob, Selector
B22	22834845	Knob, Mic Level
B23	22874032	Leg
B24	22701437	Tapping Screw, M4 x 16mm
B26	22834849	Knob, Power
B27	22705020	Rivet, 3ø x 45mm
B28	22756463	Sheet, Lever Knob
B29	22756464	Sheet, Lever Knob
ACCESSORIES		
	22952524	Instruction Book
	22954336	Owner's Manual (USA/England)
	22954338	Owner's Manual (Canada)
	22954320	Owner's Manual (Europe/Sweden)